



OPERATION INSTRUCTIONS FOR BCBA08  
WIRELESS ELECTRONIC BITE ALARM SYSTEM

**Bite alarm units**

- 6 tones settings
- 6 volume settings
- 6 sensitivity settings
- 15 sec latching LED
- Running LED
- Bidirectional Selection Function
- Anti-theft function
- 150-200 meters
- Operates with the 9V battery
- 2.5mm jack socket
- Memory function in bite alarm
- Low battery function



**Alarms User Instructions**

**Inserting Batteries:** Slide down battery cover, insert 9V battery. To complete the procedure, gently push back the battery cover.

**Power On/Off Switch:** Power on-Press the Function button for 3 seconds to turn on. Power off- Press the Function button for 3 seconds to shut down.

**Volume adjustment:** Turn the volume control "V" to step through the 6 volume settings ranging from low to high.

**Tone adjustment:** Turn the tone adjustment button "T" to step through the 6 settings.

**Sensitivity adjustment:** Turn the sensitivity adjustment button "S" to step the 6 sensitivity settings, ranging from Minimum to Maximum mode.

**Run indication/Low battery indication:** Low voltage detection, when the voltage is lower than 5.5V, the yellow light will flash.

**⚠ Note:** please turn off after use

**Technical Specification**

**Transmitter:**

Power Voltage: 9V  
Standby Current: 150uA  
Working Current: 58mA  
Shut down Current: 5uA  
Working Power: 9dB  
Frequency: 433MHz  
Coverage Range: 150-200m  
Working Temperature: -10~70°C

**Receiver:**

Power Voltage: 1.5V\*3  
Standby Current: 2.6mA  
Working Current: 21mA  
Shut down Current: 5uA  
Receiving Sensitivity: -120dB  
Frequency: 433MHz  
Coverage Range: 150-200m  
Working Temperature: -10~70°C



### Receiver units

- 4 colors clear LED choices
- Distance monitoring function
- Two-way regulation function
- 150-200 meters
- Anti-theft function
- Memory function in receiver
- Low battery function
- Operate with AAA\*3 batteries



### Receiver User Instructions

#### No.1 Function key:

- 1.Long press the key by secs ON/OFF.
- 2.LED 1Red/2Blue/3Green/4yellow relates to alarms. 5Blue means the distance indicator and line back. For example, click and red light on, means the alarm related to red light is working and can be adjusted. Then choose No.2 key, long press Anti-theft on/off. Click and choose V/T/S for alarms and adjust by the key "+" "-" on the right side as needed.Continue to adjust blue/green/yellow/alarms with the same way.
- 3.Press No.2 function key till blue light on, means test function begins working. Every alarm can get signal by each 13 secs, then the relates leds on receiver will flash. Click No.1 key one more time, return to standby mode.

#### No.2 Function key:

- 1.Before start No.1 function,long press No.2 key,turn on/off night light
- 2.After start No.1 function,click No.2 key to chose V,T,S.
- 3.After start No.1 function,long press to turn on/off Anti-theft function.


#### Left top red led/blue led:

- 1.When lines out from alarms,this red led blink(flash)
- 2.When lines back from alarms,this blue led flash
- 3.When battery voltage less than 3.3V,this red led and blue led flash slowly,remind need to change batteries asap.
- 4.This blue led lighting after test function starts.

#### Right side "+" and "-" keys:

After starting No.1 and No.2 function keys and choose V/T/S for alarms , adjust levels for related alarms as needed. Before starting No.1 and No.2 function keys, only can adjust the volume of receiver itself.

**Learning method:** Click the setting key (the hole in the back of receiver),Red led light,paired alarm(red) will send the signal,then receiver sound "du",means red led paired well with alarm(red);Same way for Blue/Green/Yellow leds accordingly.

 **Note:** please turn off after use

### BearCreeks GmbH

Marie-Curie-Str.6, 85055 Ingolstadt,Germany

Tel:+49 841 13803990 Fax:+49 841 13803988

Email:sales@bearcreeks.com

www.bearcreeks.com

<https://www.facebook.com/BearCreeksGmbH/>